




IDENTIFICATION OF THE PARTS: FOR NIKON Z 6III HOUSING

1. Locking knob
2. Fiber optic connection
3. On-Off lever
4. Hole M24x1
5. ZOOM gear
6. Port safety lever
7. Fn2 button lever
8. Lens release button
9. Hole M16x1

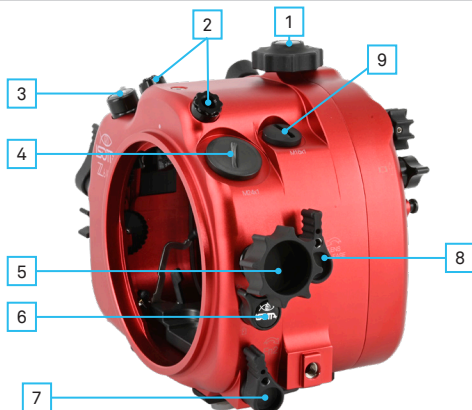

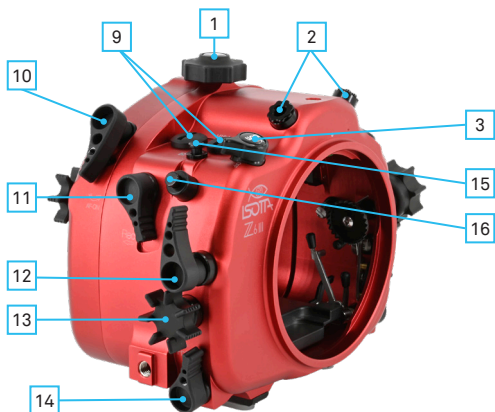






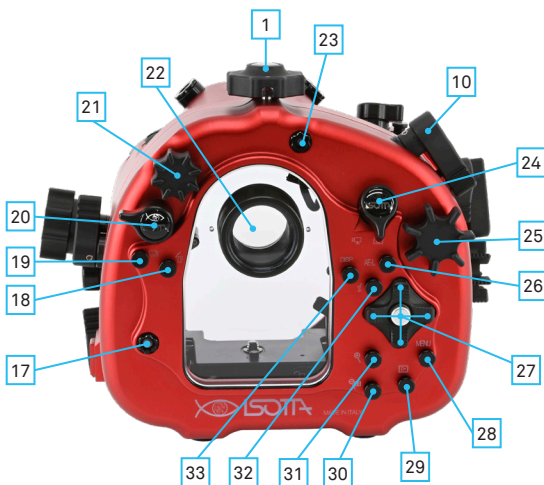
EN



10. AF-ON button lever
11. (REC) Movie-record button lever
12. Shutter-release button lever
13. Sub-command dial
14. Fn1 button lever
15. Exposure compensation button 
16. ISO button

17. Vacuum indicator LED when installed

18. Delete button 
19. Release mode button 
20. Monitor mode button lever 
21. Mode dial 
22. Viewfinder
23. Humidity sensor led
24. Photo/movie selector
25. Main command dial
26. AE-L button
27. Multi-selector and Ok button
28. Menu button
29. Playback button 
30. Thumbnail Playback and focus point button 
31. Zoom in button 



32. *i* button
33. DISP button